



www.ameintl.net

Zafety Lug Lock™ – Installation Instructions

Zafety Lug Lock™ creates resistance between two nuts to minimize their ability to rotate resulting in reduced risk of wheel loss by securing the lug nuts together.

Zafety Lug Lock™ is designed to be used with 33mm nuts on 3.5 inch stud centers.

Instructions:

1. Wheels and lug nuts must be installed as directed by the manufacturer's specifications.
2. Once the wheels and lug nuts are properly installed, Zafety Lug Locks are applied with the Zafety Lug Lock name visible.
3. Apply the units on adjacent nuts until they rest against the nut washer as shown in the picture.
4. Complete installation for all 10 nuts.
5. Follow all normal safety and maintenance inspections. *

If there are any questions regarding Zafety Lug Locks
Contact:

AME International
2324 Circuit Way
Brooksville, FL 34604



Patent Pending

**** The installation of Zafety Lug Lock™ does not preclude the need for standard safety & maintenance procedures ****

