 


DUALYVALVE™ **Red Rubber Seal Instructions:**

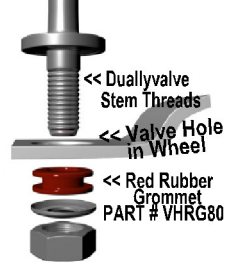


Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.

DUALYVALVE™ **Red Rubber Seal Instructions:**

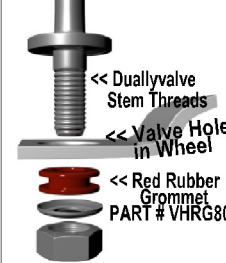


Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.

DUALYVALVE™ **Red Rubber Seal Instructions:**

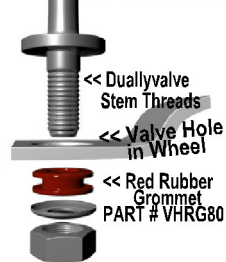 


Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.

DUALYVALVE™ **Red Rubber Seal Instructions:**

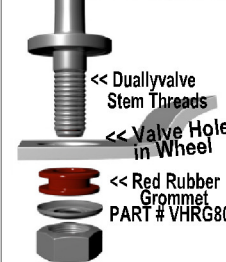 


Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.

DUALYVALVE™ **Red Rubber Seal Instructions:**

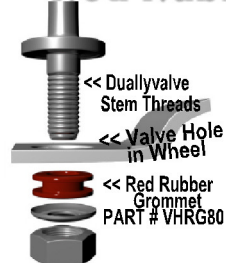 


Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.

DUALYVALVE™ **Red Rubber Seal Instructions:**

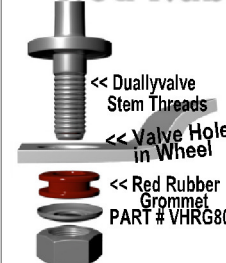

Applies to Part#s:

- DL1SP Sprinter Kit
- DL1SP13 Sprinter Kit
- DL1SPAL Sprinter Kit
- VHVS8225/B Stems
- VHVS8175 Stem

1. Remove Red Rubber Grommet from the Dualyvalve Stem.
2. Remove current rubber stem from the wheel.
3. Insert Red Rubber Grommet into Valve stem hole in the Wheel.
4. Insert Dualyvalve Stem Threads through valve hole in wheel and through Red Rubber Grommet. When inserting the valve stem threads in the grommet, support the backside of the grommet then push through.