

Counteract/Counterbalance Airless Injector

Bottle for Smaller Applications

SUV's, Pickups, ATV's



Replace screw on cap

Note If a tire and wheel is un-balanceable by regular machine balancing most likely CBB or CB isn't the answer



Jack or hoist the vehicle up, then remove valve core, completely deflate tire with valve at bottom of wheel assembly


Wear eye protection.



Pour contents of CBB bag into bottle



Push plastic hose on to threaded end of valve.

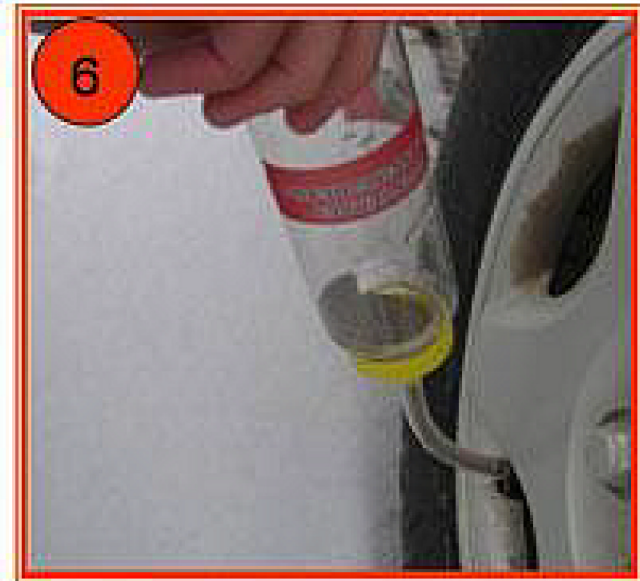

Pour CBB into the tires, this should take 7 seconds per ounce of regular CBB and 1 second per ounce of premium CBB.



Push nozzle of bottle cap on to other end of hose



Partially inflate the tire before reinstalling the valve core then inflate the tire to recommended level. Finish by installing the steel valve cap supplied